GB **GU 180 ES**

WASH CYCLE CHART

Whirlpool is a registered trademark of Whirlpool U.S.A.

Further indications are given in the pages to follow and in the user instructions.

Rinse aid level indicator
Add rinse aid.

Cycle status indicator

Rinse / Pre-wash

Washing

Drying

End of cycle

Options

Half load / Multizone button
Load the **lower** rack only. This function can be used with any wash cycle.

Delay start button
The wash cycle can be programmed to start after 3-6-9 hours.
Select the desired delay time then press the Start button. The dishwasher will start at the set time.

Start button
Indicator lamp lit while the dishwasher is operating.
Flashes when a fault occurs.
Switches off at the end of the cycle.

Cycle selector

Cycle description	Recommended load	Place the detergent in the: small compartment	Place the detergent in the: large compartment	Consumption 1) Normal load / (Half load / Multizone) Water (Litres)	Energy (kWh)	Time (Min.)
Rince / Pre-wash	Dishes to be washed later.	-	-	5.0 (4.0)	0.02 (0.02)	10 (10)
Rapid 40° C	Rapid short wash for lightly soiled dishes.	-	X	13.5 (10.5)	0.05 (0.03)	21 (20)
Crystal / China 40° C	Crystal, fine china and other lightly soiled delicate items.	-	X	13.5 (10.5)	0.45 (0.40)	56 (54)
Bio Eco 50° C 2)	Normally soiled dishes.	-	X	13.5 (10.5)	1.07 (0.83)	93 (81)
Normal 50° C 3)	Normally soiled dishes.	X	X	18.5 (14.5)	0.96 (0.80)	96 (91)
Heavy 65° C	Normally or heavily soiled dishes.	X	X	18.5 (14.5)	1.11 (0.92)	102 (90)
Intensive 70° C	Heavily soiled pots and pans.	X	X	22.5 (18.0)	1.28 (1.11)	106 (98)

1) Your values may vary due to load composition, water inlet temperature, water hardness and power supply voltage.
2) Cycle recommended for use with the new generation “enzyme” based detergents.
3) Cycle recommended for use with traditional non-enzyme based detergents.

5019 100 91300

(We reserve the right to make technical modifications)

How to use the dishwasher

1. After loading the dishwasher, close the door properly. Ensure that the water supply is turned on.
2. The dishwasher switches on automatically as soon as the cycle selector knob is turned. **One of the cycle indicator lamps will switch on.**
3. Turn the selector knob to select the desired cycle. **The corresponding indicator lamp lights up.** If required, select options (if supplied).
4. Press the Start button to start the selected cycle. **The Start indicator lamp will light up.** Once set, the programmed data cannot be altered by turning the cycle selector knob.
   Note: once the Start button has been pressed, the dishwasher memorises the last cycle selected. This information remains in the memory even during interruption of the power supply.

   To change the selected cycle, press the Start button and hold it depressed for about 5 seconds, **until the Start indicator lamp switches off.** Select a new cycle and press the Start button.

   Note: if the dishwasher is switched off during a wash cycle, when switched on again it will resume the wash cycle from where it was interrupted.

   Only open the dishwasher door if strictly necessary during a wash cycle and exercise maximum caution. Escaping steam may be extremely hot.
5. To indicate the end of the cycle, the Start indicator lamp switches off and **the End indicator lamp (if fitted)** lights up **(for about 30 min.)**.
6. Once the start indicator lamp has switched off, turn the cycle selector knob to the zero position to switch off the dishwasher. **At this time, all the indicator lights will switch off**.
7. Open the door slowly (beware of hot steam). Unload the lower rack before the upper one.

Upper and lower rack

Upper rack

Rack height adjustment:

(The dishwasher is delivered with the upper rack in the top position).

The rack height can also be changed when loaded.

- To lower: pull out the **two** side handles and gently lower the rack.
- To raise: pull up the **two** side handles until the rack clicks into place.

- **The rack must be level on both sides.**

Cup holders:

- Down: cups and long-stemmed glasses.
- Up: plates.

"Flex 3": multi-purpose support

- To be used, for example, for long-handled utensils **(arrange knives with the blade facing downwards),** cups and glasses.
- May be used in three different positions (see also "Dishwasher loading instructions" on Page 4).

1. Upon the left-hand side of the rack.
2. Upside-down, towards the centre of the rack.
3. Upside-down, towards the left side.

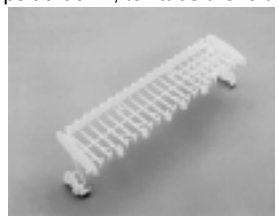

Glass holder:

Lower rack

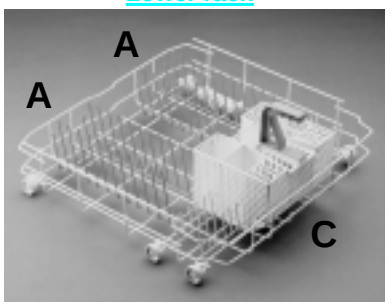

Half load / Multizone:

Loading the lower rack **only** gives greater washing power, especially for plates and pots.

Plate holder tines:

- (**A**) may be lowered to increase available space.

Cutlery basket:

- The cutlery basket (**C**) can be removed to increase available space when necessary.

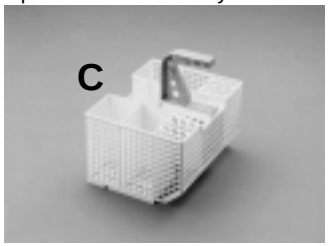

Please read the user instructions carefully.

Tips and advice

- Arrange dishes so that items do not touch each other. Arrange large dishes in the lower rack and smaller ones in the upper rack.
- Load cups at an angle to facilitate water drainage.
- Generally speaking, place cutlery in the basket with the handles positioned downwards, but ensure that any sharp knives and forks that might cause injury are placed in the basket with the handles positioned upwards.
- Make sure the water jet can reach all loaded items and that the spray arms turn freely.

Important

- Fill the detergent dispensers as required and check the rinse aid level.
- Do not use the appliance for items not suitable for washing in a dishwasher, for example: wooden items, aluminium, plastic utensils, tin, hand-decorated dishes (unglazed), silver cutlery.
- Do not put liquid fat in the dishwasher (e.g. oil used for frying) or candle wax.
- If a fault occurs or if you wish to change the current cycle, press and hold the "start" button for about 5 seconds until the start indicator light switches off.
- Before starting a wash cycle, make sure that the spray arms can turn freely and are not impeded by dishes or cutlery.
- Only switch off the dishwasher once the “Start” indicator lamp has switched off.
  If the dishwasher is switched off during a wash cycle, when switched on again it will resume the cycle from where it was interrupted without having to start it again.

Troubleshooting Guide

If a fault occurs, before contacting our After-Sales Service, make the following checks to try and remedy the problem:
The dishwasher is not working:

- Is the plug properly inserted in the wall socket?
- Is there a power failure?
- Is the dishwasher switched on?
- Has the Start button been pressed?
- Has the delayed start timer been set (if fitted)?
- Is the water supply tap on?
- Is the flow of water obstructed by impurities? If so, close the water supply tap, detach the water hose and clean the filter. Then re-connect the water hose to the tap and open the water tap once again.
- Are the filters clogged?
  (See “Care and Maintenance” chapter in the user instructions).
- Is the door closed properly?
- Is a fault indicated? (The start indicator light flashes). Start the cycle again from the beginning, press and hold the start button for about 5 seconds until the start indicator light switches off. Select a new cycle and press the start button.

Dishes still dirty after washing:

- Were the dishes loaded properly?
- Dishes must be loaded facing downwards; this is important, especially for large dishes.
- The water jets must spray the entire surface of all items.
- Make sure that dishes and cutlery are arranged properly.
- Have you selected the correct cycle?
- Did you use too much or too little detergent? (The use of poor quality detergents may result in less effective washing).
- Are the filters clogged or incorrectly assembled? (See “Care and Maintenance” chapter in the user instructions).
- Are the spray arms blocked or the nozzles clogged? (See “Care and Maintenance” chapter in the user instructions).
- Is the lower spray arm correctly fitted?

Marked dishes:

- Was too little detergent used? (See “Filling the detergent dispenser” in the user instructions).

Marked glasses and cutlery:

- Was too much rinse aid used? (See “Filling the rinse aid dispenser” in the user instructions).

AFTER-SALES SERVICE

If after carrying out the above checks the malfunction persists or appears again, turn the appliance off and turn off the water supply tap, then call our After-Sales Service (see guarantee). Please specify:

- The nature of the fault.
- The appliance type and model.

SERVICE 0000 000 00000

- Your full address and telephone number.

Please read the user instructions carefully.

Dishwasher loading instructions

UPPER RACK

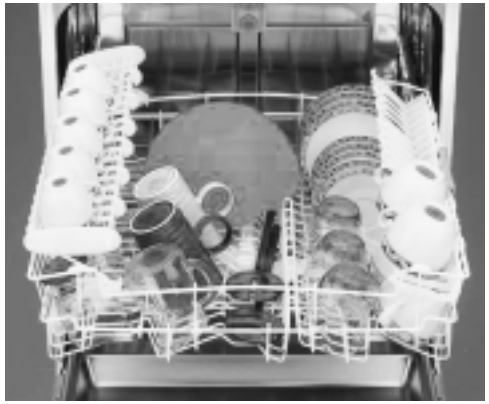
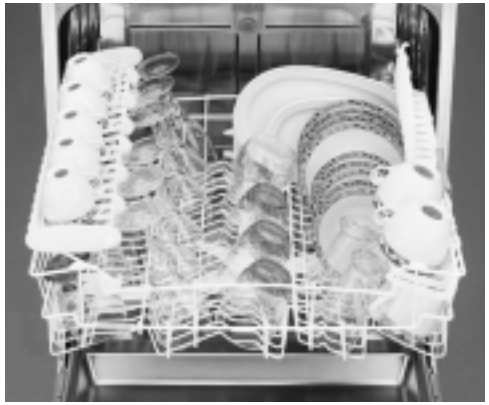

LOWER RACK

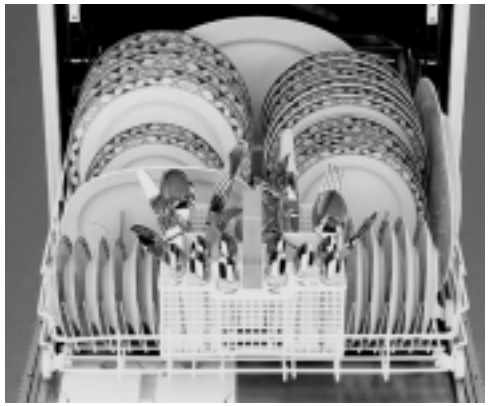

Depending on the model, rack features may vary (see “Upper and lower rack” description).